

RMI PRO SERIES

RMI 37-42-47 PRO

Packing list

- | | |
|------------------------------|----------------------------------|
| 1、 Bottom Tray - 1pcs | 9、 Shelf- |
| 2、 Top Tray - 1pcs | 3pcs(for over 42U-high) |
| 3、 Frame - 2pcs | 2pcs(from 32U-high to 42U -high) |
| 4、 Horizontal Support - 6pcs | 10、 Fan Tray - 1pcs |
| 5、 Vertical Support - 4pcs | 11、 Cover panel - 3pcs |
| 6、 Side Door - 2pcs | 12、 Vertical Cable Manager- 2pcs |
| 7、 Front Door - 1pcs | 13、 Connet Block - 12pcs |
| 8、 Rear Door - 1pcs | |


Accessories Package list

- | | |
|---------------------------------------|-------------------------------------|
| 1、 M12*L90 Supporting Feet- 4pcs | 8、 M4*12 Self-tapping Screw - 18pcs |
| 2、 Casters- 4pcs | 9、 M6*12 Self-tapping Screw - 16pcs |
| 3、 Side Panel - 4pcs | 10、 M6 Cage Nut - |
| 4、 M8*12 Hexagon socket screw - 16pcs | 60pcs(for over 42U-high) |
| 5、 M8 flange nut - 16PCS | 56pcs(from 37U-high to 42U -high) |
| 6、 M6*12 Screw - | 11、 M6 Plastic Washer - |
| 108pcs(for over 42U-high) | 84pcs(for over 42U-high) |
| 104pcs(from 37U-high to 42U -high) | 80pcs(from 32U-high to 42U -high) |
| 7、 4mm Plastic Washer - 2pcs | 12、 M6 flange nuts - 48pcs |




Step1:
Use 16pcs of M8*12 hexagon socket screws and 16pcs of M8 flange nuts to assemble the top tray, bottom tray and frame .

Refer to the left picture.

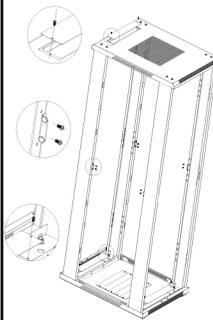


Step2:
Use 6pcs of M4*8 self-tapping screws to assemble the top cover. Use 8pcs of M4*8 self-tapping screws to assemble the side panels.

Refer to the left picture.

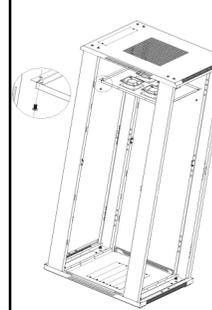

Step3:
Use 4pcs of M4*8 self-tapping screws to assemble the fan tray.
Refer to the left picture.

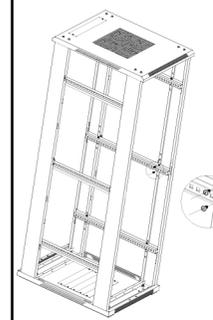


Step4:
Use 24pcs of M6*12 screws, M6 cage nuts and plastic washers to assemble the horizontal supports.
Refer to the left picture.




Step5:
Use 24pcs of M6*12 screws, M6 cage nuts and M6 plastic washers to assemble the connet blocks.

Refer to the left picture.

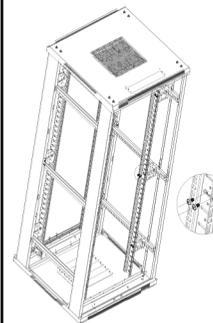


Step6:
Use 24pcs of M6*12 screws, M6 flange nuts and M6 plastic washers to assemble the vertical supports.

Refer to the left picture.

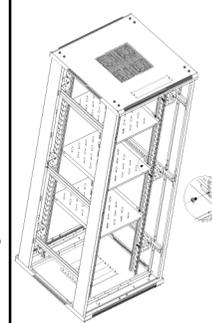


Step7:
Use 12pcs of M6*12 screws, M6 cage nuts and M6 plastic washers to assemble the platen panels .

Refer to the left picture.

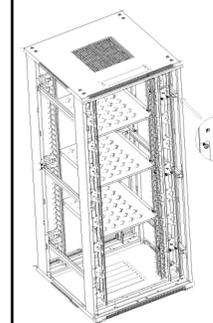


Step8:
Use 24pcs of M6*12 screws, M6 flange nuts and M6 plastic washers to assemble the vertical cable manager.

Refer to the left picture.

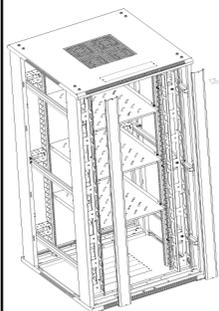


Step9:
Assemble the cover of vertical cable manager.
Refer to the left picture.

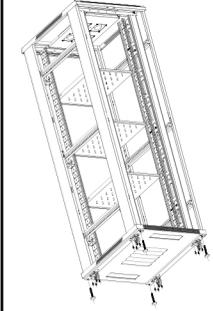


Step10:
Use 16pcs of M6*12 self-tapping screws to assemble the casters. And assemble the M12*L90 supporting leg.

Refer to the left picture.

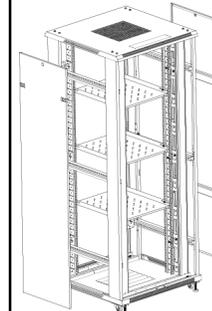

Step11:
Assemble the two side doors.
Refer to the left picture.

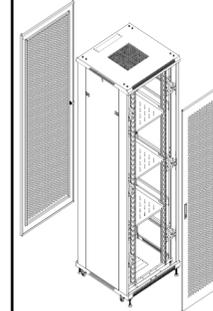

Step12:
Use 4mm plastic washers to assemble the front door and rear door.
Refer to the left picture.

RMI PRO SERIES

RMI 37-42-47 PRO

Listado Piezas en el pack

- 1- Tapa inferior - 1 pcs
- 2- Tapa superior - 1 pcs
- 3- Marco - 2 pcs
- 4- Soporte Horizontal - 6 pcs
- 5- Soporte Vertical - 4 pcs
- 6- Puerta lateral - 2pcs
- 7- Puerta Frontal - 1 pcs
- 8- Puerta Trasera - 1 pcs
- 9 - Bandeja
3 pcs (si el modelo es de 42U)
- 2 pcs (si el modelo es inferior de 42U)
- 10 - Tapa Ventilación - 1 pcs
- 11 - Panel - 3 pcs
- 12 - Organizador Vertical Cable - 2 pcs
- 13 - Bloques de conexión - 12 pcs


Listado accesorios en el pack

- 1 - Patas M12*L90 - 4pcs
- 2- Ruedas - 4pcs
- 3- Panel Lateral - 4pcs
- 4- Tornillos Allen M8*12 - 16pcs
- 5- Tuerca M8 - 16pcs
- 6- M6*12 Tornillos
108pcs(si el modelo es de 42U)
104pcs(de 37U a 42U)
- 7- Arandelas de plástico de 4mm - 2pcs
- 8 - Tornillo con rosca M4*12 - 18pcs
- 9 - Tornillo con rosca M6*12 - 16pcs
- 10- Tuerca M6
60pcs (si el modelo es de 42U)
56pcs(de 37U a 42U)
- 11. Arandelas M& de plástico
84pcs (más de 42U)
80pcs (de 32U a 42U)
- 12- Tuercas M6 - 48pcs




Paso1:
Utilice 16 tornillos M8*12 tipo Allen y 16 tuercas de M8 para ensamblar la tapa superior, inferior y el marco.

Véase a en la imagen

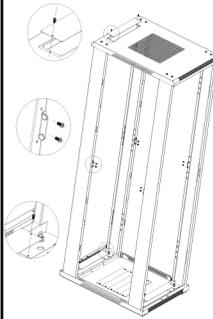


Paso2:
Utilice 6 tornillos M4*8 para ensamblar la tapa exterior. Utilice 8 pcs M4*8 para montar los paneles laterales.

Véase a en la imagen

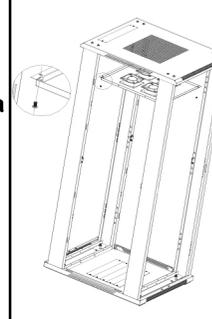

Paso3:
Utilice 4 tornillos M4*8 para ensamblar la tapa de ventilación.

Véase a en la imagen

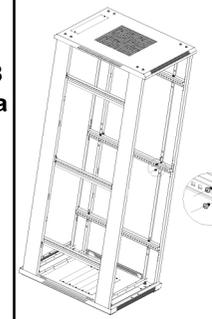


Paso4:
Utilice 24 tornillos M6*12, tuercas M6 y arandelas de plástico para montar los sopor-tes horizontales.

Véase a en la imagen




Paso5:
Utilice 24 tornillos M6*12, tuercas M6 y arandelas M6 para en- samblar los bloques.

Véase en la imagen

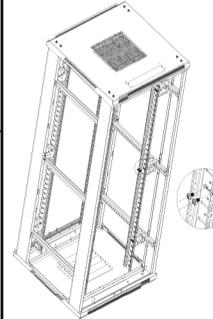


Paso6:
Utilice 24 tornillos M6*12, tuercas M6 y arandelas M6 para en- samblar los soportes verticales.

Véase en la imagen

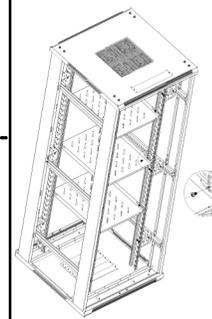


Paso7:
Utilice 12 tornillos M6*12, tuerca y aran- delas M6 para montar la bandeja .

Véase en la imagen

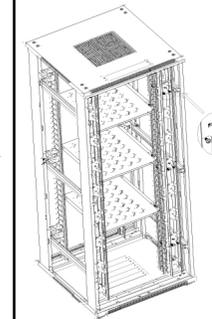


Paso8:
Utilice 24 tornillos M6*12, tuercas y aran- delas M6 para montar la guía de los cables.

Véase en la imagen

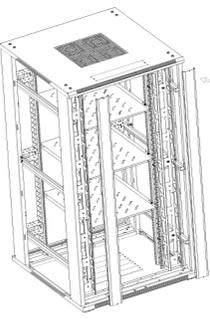


Paso9:
Ensamble la tapa verti- cal de la guía de cables.

Véase a en la imagen

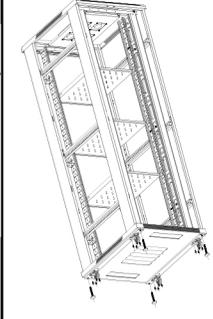


Paso10:
Utilice 16 tornillos M6*12 para montar las ruedas y mediante los tornillos M12*L90 para las patas.

Véase a en la imagen

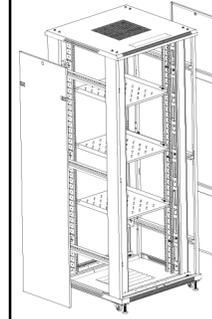

Paso11:
Ensamble las puertas laterales.

Véase a en la imagen

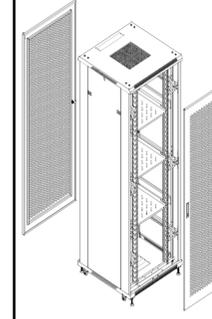

Paso12:
Utilice las arandelas 4mm para montar las puertas frontales y tra- seras.

Véase a en la imagen